

HiAlt45K User's Manual



PerfectFlite

HiAlt45K User's Manual

A miniature altimeter with two event deployment capabilities for mid to high altitude rockets.



P.O. Box 328
Mirror Lake, NH 03853
Voice (603) 569-1344
FAX (603) 569-1341

URL: www.perfectflite.com
Sales: sales@perfectflite.com
Support: support@perfectflite.com

Contents

Preface	1
Theory of Operation	2
Preliminary Setup	
Getting to know your altimeter	3
Powering the altimeter	4
Connecting external switches	5
Configuring the altimeter	7
Numerical reporting method	10
Installation	
Basic payload module	11
Sampling hole size chart	12
Apogee-only deployment	13
Dual-event deployment	14
Ejection Charges	
Ejection charge igniters	16
Making ejection charges	16
Operation	
Sequence of events	18
Preflight checklist	22
On-ground testing	22
Cautions	23
Specifications	24
Mounting Hole Template	24
Appendix	25
Warranty	26

Congratulations on your purchase of the new HiAlt45K altimeter! Please read these instructions carefully before attempting to use the altimeter to insure safe and successful operation.

If you do not read the entire manual, at the very least read pages 4, 18-20, and 21 concerning operation sequence and differences from our other altimeters with regard to powering and ejection charge igniters!!!

Your new altimeter provides two main functions:

- ✓ **Peak altitude determination.** After a flight with the altimeter installed, your rocket's peak altitude (apogee) will be reported via a series of audible beeps. This will allow you to study the effect of various design parameters (fin / nose cone shape, fin airfoil, number of fins, etc.) on your rocket's performance. It can also be used by clubs for altitude contests - compete to see who can get the most altitude out of a given engine size, etc.
- ✓ **Electronic deployment of recovery devices.** The altimeter provides electronic outputs for firing ejection charges at two points during flight: apogee and secondary (adjustable from 400 feet to 1300 feet above ground level.) Firing the first charge exactly at apogee insures that the recovery system is deployed while the rocket is traveling at the slowest possible speed. This minimizes the likelihood of rocket damage due to "zippered" body tubes and "stripped" parachutes which occur when deployment occurs at higher velocities. Electronic deployment is preferable to using the engine's built-in timed ejection charge, which can vary from engine to engine and is usually limited to two or three specific time delays (which may not be optimal for your particular engine / rocket combination).

While it is often adequate to use single-event ejection at apogee, a two-event deployment option is also provided. This involves ejecting a small parachute or streamer at apogee, allowing your rocket to fall at a fast but controlled rate to the secondary deployment level of 400 to 1300 feet AGL (jumper selectable). At this point a larger main chute is deployed to bring your rocket slowly and safely down for a soft landing. This has the significant advantage of reducing the distance your rocket drifts on windy days, making safe recovery easier and more certain.

Theory of Operation

The HiAlt45K altimeter determines altitude by sampling the surrounding air pressure during flight and comparing it with the air pressure at ground level. As the altitude increases, the air pressure decreases, and the onboard microprocessor converts the pressure difference to altitude.

When the altimeter is turned on, it reads a bank of configuration jumpers and saves their values in memory. It then runs a series of internal self-tests and checks the information that was saved from the last flight. If an abnormal condition is detected, an error condition is sounded and the error number is reported. If the self-tests pass and the last flight terminated properly, no error condition is sounded and the values of the mach delay and main deployment altitude jumper settings are reported via the built-in beeper. The peak altitude of the previous flight is then retrieved from nonvolatile EEPROM memory and reported. If ejection charge igniters are connected to the altimeter's outputs, the battery voltage is measured and reported as well.

Next the ground level elevation is sampled approximately once every second, and the ejection charges' power and continuity status is checked and reported as the altimeter awaits launch. The continuity is rechecked and reported approximately once per second during the launch-detect period. At the same time, the microprocessor also looks for a sudden decrease in pressure signifying a rapid increase in altitude (launch detection). When the altitude exceeds a preset threshold (160 feet above the ground reading), launch is detected. While awaiting launch the ground level will be updated if a slow change is detected to compensate for thermal and barometric drift.

If a mach delay value was entered into the configuration switches, the altimeter waits for the prescribed time to elapse before beginning to check for apogee. This prevents a sudden increase in pressure due to the transition from subsonic to supersonic flight from being interpreted as a false descent (apogee) so that the apogee chute is not deployed prematurely. After any Mach Delay period has elapsed, pressure readings are taken every 500 milliseconds and converted to altitude above ground level. The altitude results are inspected to determine apogee (peak altitude). When the derived rate of ascent decreases to zero, apogee is detected and a power MOSFET is turned on to supply power to the apogee event ejection charge igniter. The peak altitude reading is also stored in nonvolatile memory for

later retrieval. Altitude readings continue to be taken during descent, and are compared with the main deployment threshold that was read from the switch bank on power-up. When the altitude has decreased to the main deployment level, another power MOSFET is turned on to supply power to the main parachute ejection charge igniter. At this point the peak altitude is reported continuously every fifteen seconds via a sequence of beeps.

Getting to Know Your Altimeter:

Refer to figure 1 below to identify the following items:

- A) Battery terminals (note polarity +/-)
- B) Power switch terminals
- C) Main ejection charge terminals
- D) Drogue (Apogee) ejection charge terminals
- E) Audio beeper
- F) Main deploy jumpers (jumpers 1 & 2)
- G) Mach delay jumpers (jumpers 3 & 4)

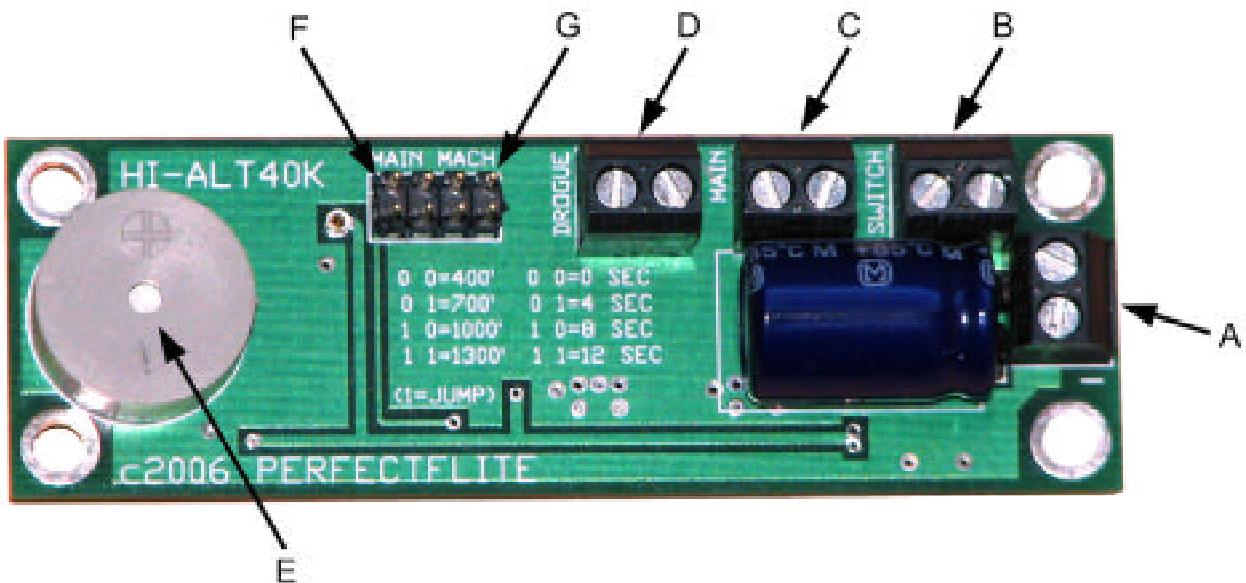


Figure 1: Parts identification

Powering the Altimeter

The altimeter's electronics can be powered by any source of 6 volts to 16 volts that can provide enough current to fire the ejection charge igniters you choose to use. The built-in reverse polarity protection diode is rated at 5 amperes of current; if you will be using igniters that require more current than this please contact PerfectFlite for additional details and advice.

With the HiAlt45K, all current for firing the igniters comes from the battery. A fresh 9V alkaline battery will provide enough current for multiple low current electric matches. If you use a different battery/igniter combination and your battery is not capable of firing the igniters that you choose to use (or is marginal in doing so), your charges may not fire, resulting in a crash!

Power for the altimeter itself (as opposed to the ejection charge igniters) is supplemented with on-board backup. This allows for momentary losses of power (up to 4 seconds) in flight without the risk of affecting the operation of the altimeter's microprocessor. The ejection charge igniter current is not supplemented, however, and must be present at the time the channels fire in order to insure proper firing action. *While the 4 second power backup provides insurance against occasional momentary power loss, you should always provide clean primary power by using quality switches and batteries with secure connections for optimum reliability.*

Standard 9V batteries can be connected using the supplied battery clip. Make sure that both of the clip's snaps are gripping the battery terminals firmly to prevent power interruption due to vibration. The larger battery terminal and clip terminal can be compressed inward if necessary to insure a snug fit.

The operating current for the HiAlt45K is very small, approximately 1 milliamp, which allows a very long runtime with a standard 9V alkaline battery (hundreds of hours). Smaller batteries (e.g. 12 volt A23 type) will have a shorter runtime and much lower peak current availability for firing igniters.

If you use something other than a standard 9V alkaline battery and low current ematches, always check the runtime and firing capability of your battery/igniter combination on the ground before committing to flight!

Terminal Block Note

To attach wires to the terminal blocks, loosen the retaining screw (facing upward from the board), insert the stripped wire end from the side, and retighten the screw. Make sure that you strip enough insulation from the wire (~3/16") so the bare wire (not the insulation) is gripped by the contact. Do not allow an excess of bare wire outside the terminal, as it could short-circuit to adjacent parts or wires. Always use solid wire (or tin any stranded wire ends with solder) – the loose strands in untinned stranded wire can “escape” during wire insertion and make contact with adjacent terminals.

After inserting the wires and tightening the connections, tug the wires with a pair of longnose pliers to insure that they are gripped tightly. You do not want these connections to loosen in flight!


Connecting Switches

Connect a suitable ON/OFF switch to the power switch terminals. One important consideration for the power switch is that it be “bounce-free” – you do not want the switch to turn off momentarily during vibration or acceleration, as the altimeter could reset and deployment would fail. The HiAlt45K can tolerate a four second loss of power without affecting operation, but it is always wise to use the best quality switches possible.


The power switch should be mounted with the switch movement perpendicular to the travel of the rocket. This will minimize the forces placed on the switch during acceleration/ deceleration, which could inadvertently move the switch to the “off” position. If the switch is on the outside of the airframe or near any of the recovery device rigging, a cover should be fabricated for the switch to prevent it from being bumped to the “off” position due to impact with the rigging.

A simple and effective switch can be made using a lever actuated microswitch (e.g. Omron SS-10GLT), a small piece of brass tubing, and a length of brass rod with a sharpened end. The lever is carefully removed from the microswitch, revealing a small plunger which turns the switch on and off. A short length of brass tubing is then secured to the top of the switch housing with a small amount of epoxy (do *not* use CA, as the outgassing during curing will get into the switch and ruin its contacts) such that when the sharpened end of the brass rod is inserted into the tubing it depresses the plunger. The switch assembly is mounted inside the altimeter bay, with a hole for the brass rod leading to the outside. The “Normally

“Closed” (NC) terminals of the switch are used in this case, so when the rod is inserted and the plunger is depressed the switch turns off (“opens”). A “remove before flight” flag can be hung from the end of the brass rod to remind you to turn on the altimeter. One advantage to using a “Normally Closed” switch is that any failure of the external mechanical assemblies (e.g. brass tube breaking off) during flight will NOT turn the altimeter off.

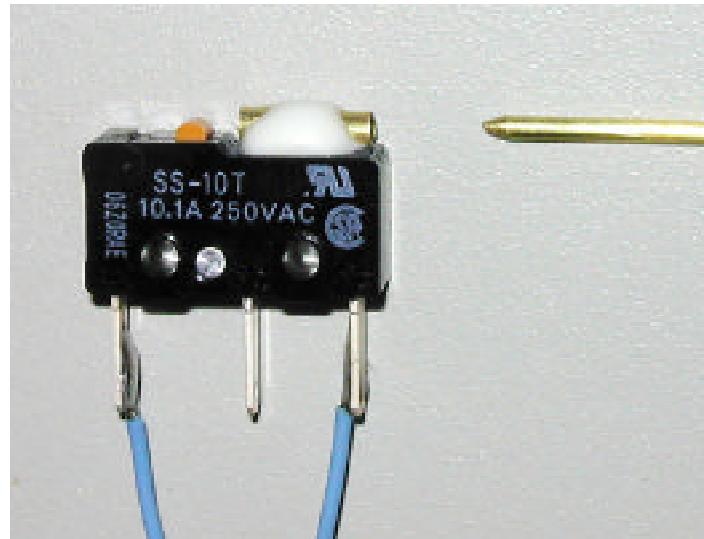


rod out, switch on

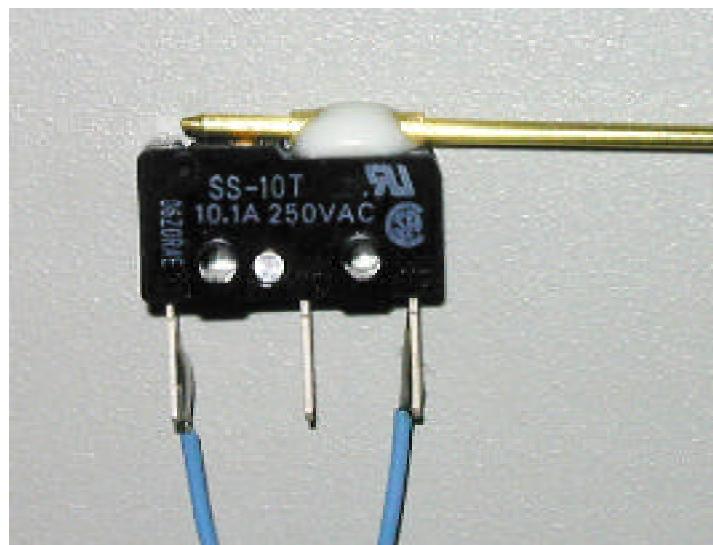

rod in, switch off

Configuring the Altimeter

A bank of four jumper pins is provided for setting mach delay time and main recovery device deployment altitude. The jumpers are only read on power-up, so their status cannot be altered by flight induced vibration or shock. Any intentional modification of the jumper settings should be done with power off so that they are read properly the next time the altimeter is turned on.

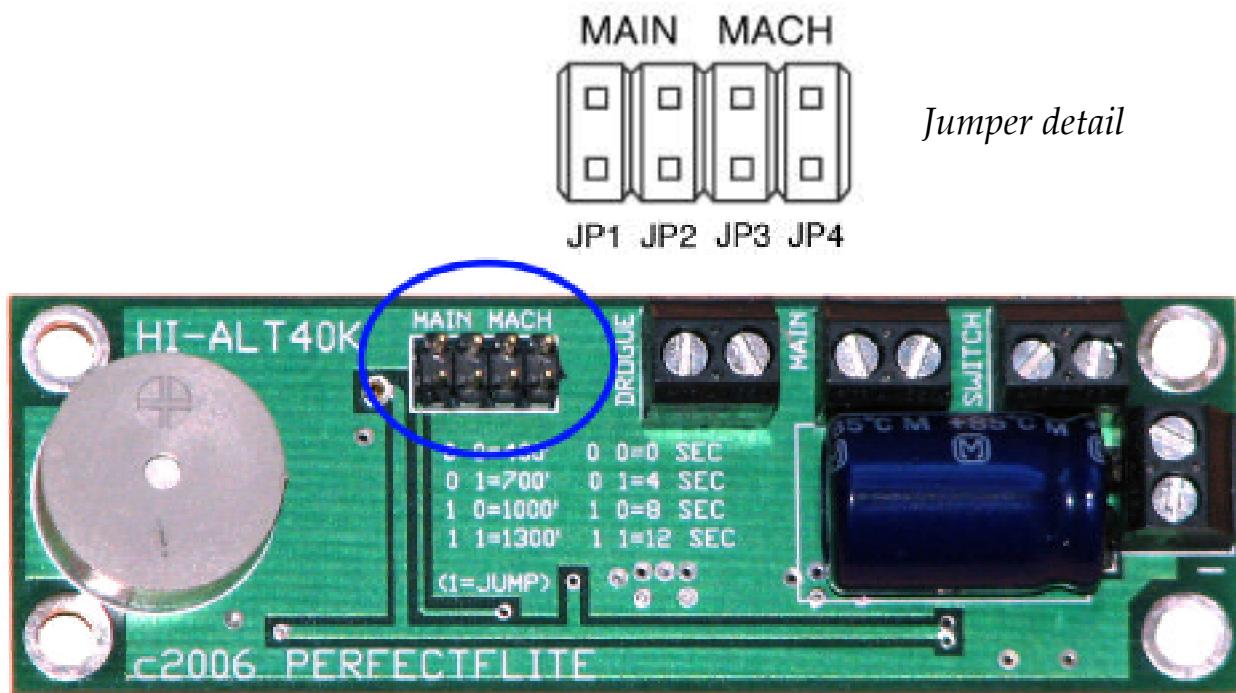

Tables for setting the jumpers appear on the following pages along with graphic representations of the various jumper positions.

When the altimeter is first turned on, the current mach delay and main deployment settings are reported via the beeper (see following section on numerical reporting for details). This allows you to confirm that the correct settings are entered even if the altimeter is hidden inside your rocket. These settings are followed by a number representing the peak altitude attained on the altimeter's last flight and the battery voltage if ejection charges are connected.

Mach Delay

The mach delay setting is used to prevent premature deployment of the apogee recovery device as the rocket makes the transition between subsonic and supersonic flight. During this period the pressure surrounding the airframe will increase suddenly, which could be interpreted as a decrease in altitude, triggering the apogee deployment event. If you think that your rocket will go supersonic, a computer simulation should be run to determine the time at which flight returns to subsonic speeds. Add in a safety factor of 20%, round up to the nearest value in the table below, and set jumpers 3 & 4 appropriately. The mach delay time must always be less than the simulation's reported time to apogee.

Important: If your rocket is not expected to exceed Mach 1, the mach delay time should be set to zero (jumpers 3 & 4 OFF). This will allow apogee detection to occur at the proper time.

JP3	JP4	Delay
off	off	0 seconds
off	on	4 seconds
on	off	8 seconds
on	on	12 seconds
connected		24 seconds

Table 1 - Mach delay settings



no
delay




4
seconds



8
seconds



12
seconds

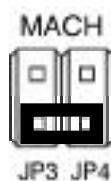


24
seconds

Main Deployment

The altitude at which you would like your main recovery device to be deployed is set using jumpers 1 & 2. Set the altitude high enough to insure that the chute will deploy fully in time to slow the rocket's final descent, but low enough to prevent excessive drift. In most cases a setting of 400 or 700 feet is appropriate. If you have any doubt as to the time it will take for your chute to deploy, choose a number towards the upper end of the range and reduce it only if the chute opens promptly. For small fields, loosely packed chutes, and windy conditions you may want to choose the lowest setting of 400 feet.

JP1	JP2	Altitude
off	off	400 feet AGL
off	on	700 feet AGL
on	off	1000 feet AGL
on	on	1300 feet AGL

Table 2 - Main deployment settings

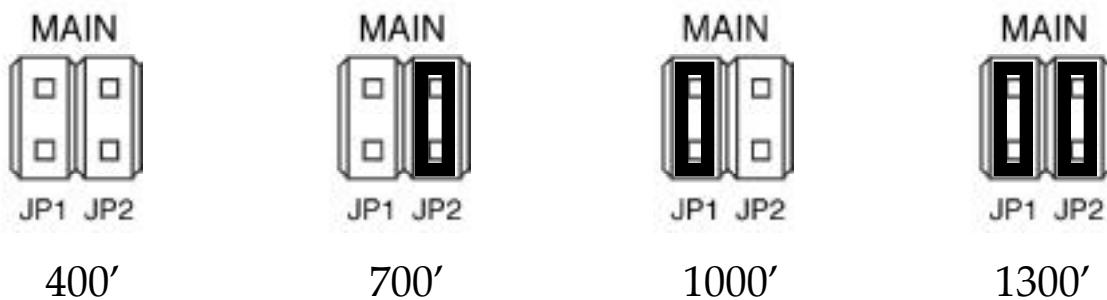

Numerical Reporting

Numbers are reported as a long beep (separator), followed by a pattern of shorter beeps. With the exception of the one or two digit Mach Delay and the two digit Battery Voltage, all numbers are reported using up to five digits – a series of beeps for the first digit (tens of thousands of feet), a short pause, another series of beeps for the next digit (thousands of feet), etc. Leading zeroes are suppressed: 1,582 feet would be represented with four digits, not five digits as in 01582. Ten beeps are used to indicate the number zero (if zero beeps were used, you would not be able to differentiate between 2200 feet and 22 feet!).

As an example, 12,560' would be reported as:

long beep-pause-beep-pause-beep-beep-pause-beep-beep-beep-beep-pause-beep-beep-beep-beep-beep-beep-beep-pause-beep-beep-beep-beep-beep-beep-long pause

Digit	Reported as:
0	beep-beep-beep-beep-beep-beep-beep-beep-beep
1	beep
2	beep-beep
3	beep-beep-beep
4	beep-beep-beep-beep
5	beep-beep-beep-beep-beep
6	beep-beep-beep-beep-beep-beep
7	beep-beep-beep-beep-beep-beep-beep
8	beep-beep-beep-beep-beep-beep-beep-beep
9	beep-beep-beep-beep-beep-beep-beep-beep-beep

Table 3 - numerical beep sequences

Installation

Basic record-only mode

Your altimeter needs to be installed in a separate payload compartment, sealed from the pressure and heat of the ejection charge gasses. It is *not* OK to tie it to the shock cord and pack it in with the chute! The high pressure and heat encountered during ejection would damage the delicate pressure sensor's diaphragm.

If you are not using the electronic ejection features and are just interested in peak altitude determination or data collection, the simplest mounting method involves adding a sealed payload compartment to your rocket. This is just a section of body tube behind the nosecone with a sealed tube coupler connecting it to the main body tube (see figure 5). Some rockets already have such a payload section, and one can be added easily if yours does not.

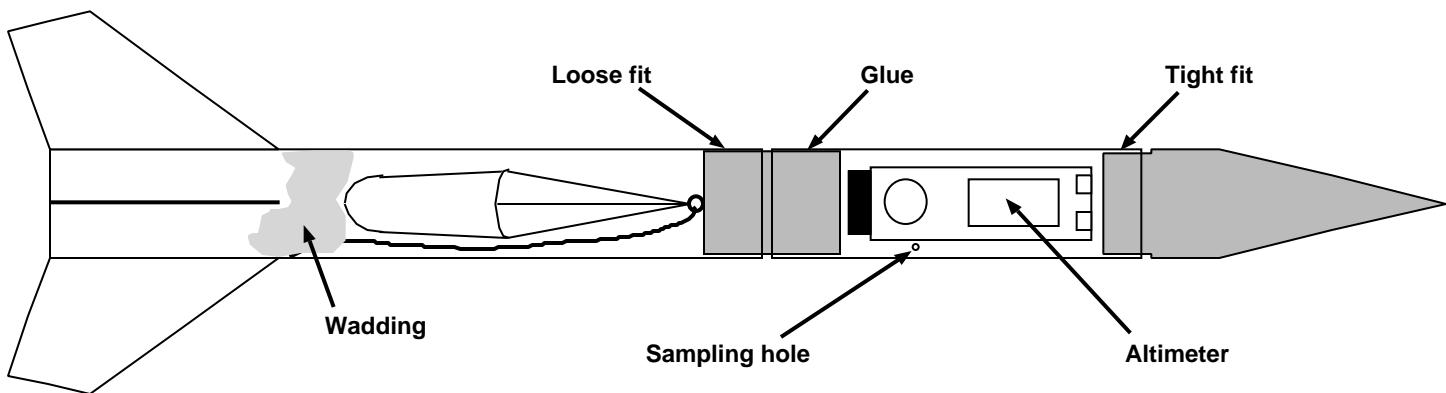


Figure 5: Installation for reporting only

You must drill a clean-edged hole in the payload section to allow outside air pressure to be sampled by the altimeter. This hole should be as far away from the nosecone and other body tube irregularities as possible (3X the body tube diameter or more) to minimize pressure disturbances being created by turbulent airflow over the body tube. Sand the area around the hole as necessary to eliminate flashing or raised edges. Exact sizing of the hole is not usually critical, refer to the table on the next page for suggestions.

For best results with supersonic flights, do not exceed the hole size listed in the table and insure that the hole is burr-free and located properly.

<i>Diameter</i>	<i>Length</i>	<i>Hole Size</i>
1"	5"	.031" (1/32")
1.6"	6"	.047" (3/64")
2.1"	6"	.078" (5/64")
2.1"	12"	.156" (5/32")
3.0"	12"	.219" (7/32")
3.0"	18"	.344" (11/32")
Other "D"	Other "L"	$H=D*L*.006$

Table 4 - Payload Section Size vs. Sampling Port Hole Size

While not strictly necessary, the single sampling hole can be replaced by several smaller holes distributed around the airframe's circumference. This will minimize the pressure variations due to wind currents perpendicular to the rocket's direction of travel. The optimal configuration consists of four holes, with each hole 1/2 the diameter of the properly-sized single hole, spaced at 90° intervals around the body tube circumference.

If you are not using ejection charges, mounting and wiring is straightforward. Simply place the altimeter in the payload section - it does not matter which end of the altimeter faces "up". Use pieces of foam rubber in front of and behind the altimeter to prevent it from shifting under acceleration and deceleration. A wrap of foam weather-strip around the center portion of the altimeter will provide a snug fit in 24mm/BT50 size body tubes, and a "sleeve" made out of standard foam pipe insulation can be used for larger size tubes. Make sure that your foam rubber pieces do not block the path from the air sampling hole to the altimeter's pressure sensor element. A channel can be cut in pipe insulation for this purpose; make sure that the channel lines up with the sampling hole and the sensor's air inlet. Your payload section should close securely so that the altimeter is not "ejected" upon motor burnout deceleration or chute deployment shock.

Setting up the altimeter for use as a recovery device with apogee-only or two-stage deployment is necessarily more complex. You may want to gain some experience with your altimeter in “reporting only” mode before using it for deployment. Then begin with a simple apogee-only deployment application, and move on up to two-stage deployment after you’ve gained experience with electronically-fired ejection charges. The following suggestions can be used as a “starting point”, and should be adapted to suit your specific application.

To insure the highest degree of safety, all recovery systems should be ground-tested prior to launching. Using redundant backups (e.g. motor ejection charge in addition to electronic deployment) is always a good idea whenever possible.

Installation with apogee deployment

Installation with apogee-only electronic deployment is similar to the standard installation noted above. The altimeter is mounted in the sealed payload compartment, and a small hole is drilled through the rear bulkhead for the ejection charge cable (see figure 6). Route the ejection charge cable through the bulkhead with the altimeter connector end in the payload section, leaving sufficient wire aft of the bulkhead to allow connection of the ejection charge. Seal the point where the ejection charge cable passes through the bulkhead with silicone, epoxy, or hot melt glue to prevent ejection charge pressure from entering the payload compartment. Make sure that the altimeter, battery, and wires are mounted securely so they will not shift under the high G forces experienced during acceleration and burnout/deceleration. Leave some slack in the cables to prevent the plugs from pulling out of the terminal blocks if things do shift. Prior to launch you will attach the ejection charge’s leads to the loose ejection charge cable ends, twisting them tightly and taping them to prevent shorts. The ejection charge will then be loaded into the rocket’s airframe immediately in front of the motor, with flameproof wadding inserted after it to protect the chute. Pack the chute next, being careful to position the shroud lines and shock cord away from the ejection charge cable to minimize the likelihood of tangling. Then join the main airframe and payload sections, making sure that they are sufficiently loose to allow separation when the ejection charge fires. The altimeter should not be switched ON until your rocket is loaded onto the pad to prevent wind gusts, etc. from prematurely firing the ejection charge. See the Preflight Checklist section for more details.

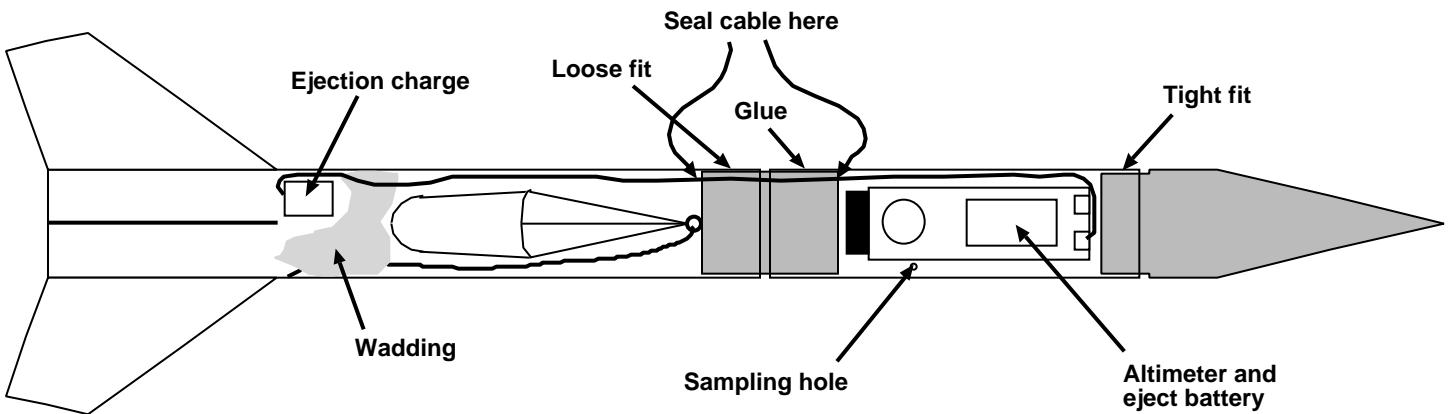


Figure 6: Installation for apogee deployment

Choose a motor with a delay that is a few seconds *longer* than you would normally use with the specific motor/ rocket combination. The motor's charge will then serve as a backup in the event of a primary ejection malfunction.

Installation with dual event deployment

Again, there are many possible variations of the following installation scheme. Careful attention to the design of your installation will make the difference between a successful installation and a failure. Ground test your setup before launching to insure proper separation and deployment of recovery devices. The basic premise is that you want two separable parachute compartments and a single sealed electronics bay. Perhaps the simplest method involves a basic setup similar to the apogee deployment system described above, with an additional sealed chute compartment behind the nosecone (see figure 7). A small parachute or streamer is ejected from the compartment aft of the payload/ electronics section at apogee, and a larger chute is ejected from the compartment between the payload section and nosecone at a lower altitude (set by the Main Deployment jumpers). The ejection cable leading into the forward parachute compartment should be sealed in the same manner as the aft one to prevent ejection gas entry into the payload compartment. Two additional precautions should be made: First, the joint between the payload section and the forward parachute compartment should be either a very tight friction fit or preferably a positive-retention system like screws or retaining pins can be employed. This will prevent the shock of the main chute deployment from

separating this joint and ejecting the electronics. Second, the fit of the nosecone to the upper parachute compartment should be tight enough to prevent inadvertent separation at apogee, but loose enough to allow separation upon main chute ejection charge firing.

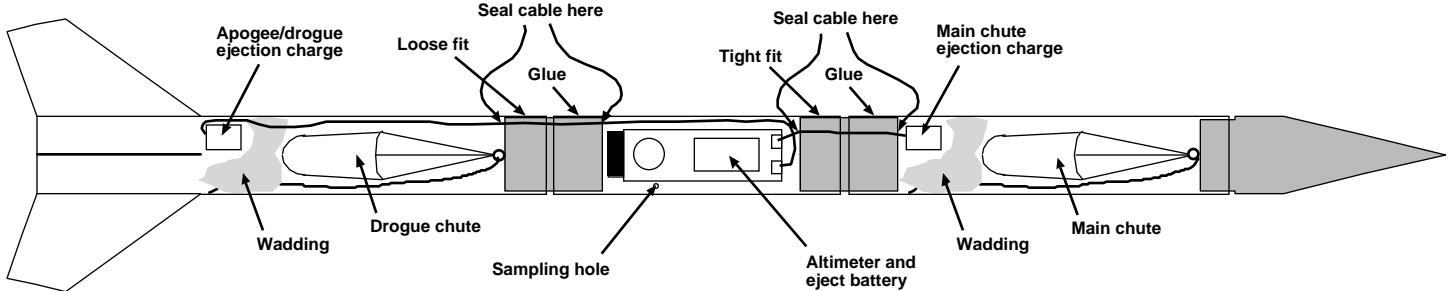


Figure 7: Installation for dual event deployment

A number of companies sell electronics bays intended for use with larger rocket kits or with your own scratchbuilt design. These bays usually consist of a section of coupler tube sized to fit in the intended airframe, with bulkheads to seal both ends. The front bulkhead is typically glued in place, and the rear bulkhead is made removable to allow access to the electronics. When this type of arrangement is used the third center section of airframe can be eliminated, as the electronics are completely contained within the coupler. If the coupler is held into the forward chute compartment with screws, it can be quickly removed and transferred to another rocket to allow one altimeter to be shared among many rockets.

Ejection charges

The ejection charges used to deploy your recovery devices can be purchased commercially or made at home. Since ejection charges contain a quantity of explosive black powder, extreme care must be exercised while constructing and handling them. Keep your face and hands away from the end of any ejection charge that has been loaded with powder! Do not look into or reach inside rocket airframes with live ejection charges loaded, and remember that an accidentally- ejected nosecone can severely damage anything in its path.

The HiAlt45K altimeter can use a wide range of igniter types for ejection charge ignition. Commercial low current electric matches such as DaveyFire N28B, Oxral, M-Tek, or Cosmos ematches are often used. A convenient, lower cost alternative for smaller rockets can be made using miniature Christmas tree bulbs. A kit for making this type of charge is available from PerfectFlite, and complete directions are available on our web site for the do-it-yourselfer. Since the altimeter can handle currents of 5 amperes or more (assuming your battery can supply it) very rugged and reliable igniters can be made by soldering a 1/2" to 1" bridgewire of 40 gauge nichrome wire to the ends of a length of 24 gauge solid zipcord. Do not use twisted pair leadwires (e.g. ethernet cat3, 5) in this application -- bending and twisting the leadwires would transmit stress to the bridgewire, possibly breaking it. *Always test any non-standard igniter/battery combinations extensively on the ground before using them in flight.*

Never use high current igniters intended for motor ignition to ignite your ejection charges! They require excessive voltage and current, do not have the required reliability, and could also damage the inside of your rocket!

For increased reliability, multiple igniters can be used with a single charge. The igniters are connected in parallel and attached to the altimeter's terminal block. If one igniter fails, the other(s) will ignite the charge, preventing ejection failure. Bear in mind that multiple parallel-connected igniters will require more current from the battery. It is a good idea to perform ground testing of any new igniter/battery choices using twice the number of igniters that you plan to fly with, giving you a larger margin of safety. If you will be flying with a single igniter on each terminal, test with two. If you will be flying with two igniters per channel, make sure your battery will fire four on the ground.

Basic ejection charges can be made in the following manner: Cut a section

of cardboard tube (the tubing from shirt hangers works well) about 1" long, and use hot-melt glue to fill in a plug at one end. Work the glue in from the end that you want to plug, rotating the tube between your fingers until a solid seal is attained. Set the tube (glue end down) on a piece of wax paper or plastic until the glue cools. When cool, inspect the plug for uniformity of thickness (3/16" to 1/4" is good) and lack of holes.

Insert your ejection igniter in the open end of the tube, being careful to not damage the delicate ignition head. Bend the lead wires over the lip of the tube and use masking tape to secure them to the outside of the tube. Set the tube/igniter assembly down, open end up, to prepare for the addition of black powder. Making a stand out of a small block of wood with appropriately-sized holes drilled in it will hold your tubes more securely during the filling/sealing operation.

Add the proper quantity of FFFFg black powder (multiply the volume of the parachute bay in cubic inches by .01 to get grams of black powder) and gently tap the side of the tube to distribute the black powder around the igniter head. Using a section of 1/8" wooden dowel, carefully press a small ball of flameproof wadding in on top of the black powder so that the powder is completely covered. Do not press too hard or you may damage the igniter element. Seal the end of the ejection charge with a few wraps of tape. The purpose of the seal is simply to hold the powder in. You do NOT want to use something stronger like epoxy, which would make the tube rupture upon ignition, possibly damaging your rocket's airframe. Using a tape seal will keep the ejection charge tubing intact, so that it can be reloaded and reused.

Your ejection charge is now complete. Store loaded ejection charges in a safe manner, with the igniter wire ends shorted together until immediately prior to use. Since the actual amount of black powder necessary can vary based on a number of parameters (powder type, nosecone/coupler to tube friction, etc.) you should test your ejection charges on the ground before flight. Start with a little less powder, and increase the amount until the airframe separates reliably. Then add 50% as a safety factor to account for variations in friction due to humidity, etc.

Operation

To insure proper operation of your altimeter and any associated deployment systems, you must observe and adhere to the following sequence of events. If you launch before the altimeter is ready, ground level will not be sampled properly and deployment will not function properly. If you don't have proper continuity through your ejection charge igniters, the recovery devices will not be deployed and serious rocket/property damage can occur.

Sequence of events

Prepare your rocket and install the engine before setting up the altimeter. Do not install the igniter into the engine until you are at the launch pad.

If you are not using electronic deployment (the altimeter will only be used for the altitude reporting function) you can ignore the parts of this section that deal with ejection charges.

If you are using electronic deployment, the apogee and main ejection charges and associated igniters should be loaded into your rocket and the wires connected to the altimeter's ejection charge terminals. The power switch should be OFF (open circuit) and the battery should be connected. *Make sure that the apogee and main ejection charge cables are not swapped*, and that no wires are shorting together or to any conductive objects. Also insure that adequate wadding or other protection is used to prevent the hot ejection charge gasses from burning your parachute and shock cord.

At this point you can have the RSO inspect your rocket (if applicable) and proceed to the launch pad. Install the igniter in the engine and place the rocket on the launcher. Turn the power switch ON and listen to the series of beeps from the altimeter. Normally a one or two digit number, representing the Mach Delay switch settings, will be reported first. If the previous flight did not terminate properly, a brief siren tone will sound instead, followed by a series of beeps representing an error code, then another brief siren tone, and then normal operation will resume. The error code will be cleared when a new flight is made.

If you hear a continuous siren tone when power is first applied, the altimeter's built-in self test is indicating a problem. Do not attempt to launch if this condition exists!

After the Mach Delay setting is reported, the beeper will present a three or four digit number representing the main chute deployment altitude. If the Mach Delay or Main Deployment settings are not reported as expected, turn the altimeter OFF and inspect/correct the jumper settings.

Another three to five digit number will be reported after the main deployment altitude number. This represents the peak altitude attained on the last flight, as saved in the altimeter's nonvolatile EEPROM memory. This reading is preserved even when the power is turned off, and is not cleared until a new flight is made. This allows you to retrieve post-flight altitude data from the altimeter even if your rocket is hung up in a tree for weeks with a dead battery!

If you have any igniters connected to the ejection charge terminal blocks, the altimeter will next report the battery voltage in tenths of a volt (if the battery voltage is 9.2 volts, it will be reported as nine beeps followed by two beeps). This allows you to confirm that your battery is good without the need for a separate multimeter or battery tester.

After the battery voltage is reported, the altimeter will signal continuity with a series of beeps. **A single beep every second indicates proper continuity on the apogee charge, two beeps indicates continuity on the main charge, and three beeps indicates continuity on both charges.** The continuity beep annunciation will continue until the rocket is launched. If you hear a long tone after each set of continuity beeps, this indicates that the battery voltage has dropped by at least 6% since power was first applied. This may occur if your rocket sits on the pad for a long time before launching and the battery has been depleted. **If you hear the long tone between continuity beeps, check and replace the battery if necessary before launching!**

The ejection charges are now armed and ready (secondary arming occurs after the altimeter detects launch conditions of 160' AGL altitude). From this point on you should exercise extreme caution, as you will be working with live charges. Keep your hands, face, and other body parts away from the ejection charges and the nosecone. If the charges should blow prematurely, you do not want to be in the path of the forcefully ejected nosecone or payload section.

If continuity is being reported as expected, you can connect the engine's

igniter to the launch system. Your rocket is ready to launch!

If continuity is not reported as expected, turn the altimeter power switch OFF and correct the problem. Do not launch without proper continuity!

Warning:

Launching your rocket before the continuity annunciation will also result in failure. Always wait until you hear the continuity beeps (or silence if deployment is not being used) before allowing your rocket to be launched.

Note:

If you are not using electronic deployment and have nothing connected to the altimeter's ejection charge terminal blocks, the altimeter will be silent while it is awaiting launch. If you want to have audible confirmation that the altimeter is ON and ready, simply connect a dummy load to one of the terminal blocks. A mini Christmas tree bulb or a 1KΩ resistor will work fine for this purpose; do NOT short circuit the terminals with a jumper or you will draw excessive current from the battery when the events fire.

When you recover your rocket, the altimeter will be beeping to report the peak altitude attained. Since this number is saved in nonvolatile memory, you can safely turn the altimeter OFF at any time. If you want to retrieve the altitude reading at a later time, simply turn the altimeter back on and listen for the third number reported (previous flight altitude).

Error Codes:

If an error condition is detected during flight it will be reported the next time the altimeter is powered up. A brief siren tone will sound, followed by a long separator tone and a number of beeps representing the error, followed by another brief siren tone. The error will be retained until the next successful flight, at which point it will be cleared.

Code Meaning

- | | |
|---|---|
| 1 | Launch detected, power lost before any charges fired |
| 2 | Launch detected, power lost after firing of apogee charge |

Simplified Powerup Sequence

The following list is the order that settings and error conditions are reported at powerup. More specific detail on the individual conditions are available in the preceding sections.

- Continuous siren at powerup indicates selftest failure. **Do not fly.**
- Brief siren, followed by error code, and brief siren again if an error occurred during the last flight. OK to fly if problem reported has been addressed.
- Mach Delay setting reported
- Main Deployment altitude setting reported
- Last flight altitude reported
- Battery voltage reported
- Continuity beeps reported

Rocket is ready to launch at this point if all settings are as expected.

Differences between HiAlt45K and miniAlt/WD

Users of the miniAlt/WD should note that the HiAlt45K and miniAlt/WD have some internal differences in their power and igniter firing circuitry:

1. The miniAlt/WD will ONLY fire low current, low energy electric matches. The HiAlt45K will fire anything that requires less than 5 amperes of current.
2. The miniAlt/WD firing outputs are turned ON for 50 milliseconds, the HiAlt45K outputs are turned ON for a full second.
3. The HiAlt45K requires that the battery be able to supply the current necessary to fire the igniter, while the miniAlt/WD supplies the firing current itself.
4. The miniAlt/WD can survive a 2 second loss of power during flight without resetting, while the HiAlt45K can survive for up to 4 seconds.
5. The miniAlt/WD can still fire igniters during the 2 second power loss, the HiAlt45K cannot fire during power losses since the firing power is provided by the battery.

Preflight Checklist

- Prep rocket, install engine, do not install engine igniter.
- Make sure power switch is OFF.
- Install ejection charges (if used) and wadding / chute protection.
- Connect ejection charge leads to altimeter's ejection charge terminals, making sure that wires do not short together or short to anything else. Do not swap wires to apogee / main charges!
- Have your rocket inspected by RSO if applicable, install engine igniter, and place rocket on launch pad.
- Turn altimeter power switch ON. **If you hear a continuous siren, turn altimeter OFF and do not fly.** Confirm Mach Delay and Main Deployment settings. Last flight altitude will be reported as well, followed by battery voltage. **If battery voltage is low or not as expected, do not fly!**
- Ejection charge continuity will be annunciated by a series of one, two, or three beeps. **Do not launch if continuity status is not as expected!**
Ejection charges should be considered to be "armed" at this point and body parts kept clear!
- If continuity is being reported as expected, attach launch system leads to engine igniter and launch!

Testing

A simple apparatus for ground-testing the entire ejection system can be made with a small (~1" dia) plastic suction cup and a 15 feet of 1/8" plastic hose. Drill a hole in the center of the suction cup and insert one end of the plastic hose. Glue hose in place if friction fit is not achieved.

Tape the suction cup to the outside of the rocket's airframe such that the air sampling hole in the airframe lines up with the plastic hose i.d. Prep the recovery system as in the checklist above, omitting the rocket engine and its igniter. Place the rocket on a slightly angled launchpad, with the nosecone pointing away from people and other objects. After the system is armed and ready for "launch", suck on the free end of the plastic hose to create a

vacuum within the payload compartment. The altimeter will sense this as a launch condition. When you stop sucking on the hose, the altimeter will sense apogee and the payload section should be ejected from the booster. As you release the vacuum from the hose, the altimeter will sense the lower apparent altitude and will eject the nosecone from the payload section. If the sections do not separate with a reasonable amount of force, additional black powder should be added to the ejection charges to insure reliable separation.

Cautions

- Do not touch circuit board traces or components or allow metallic objects to touch them when the altimeter is powered on. This could cause damage to your altimeter or lead to premature ejection charge detonation.
- Exercise caution when handling live ejection charges - they should be considered to be explosive devices and can cause injury or damage if handled improperly.
- Do not expose altimeter to sudden temperature changes prior to operation. The resulting circuit drift could cause premature ejection.
- Do not allow strong wind gusts to enter the airframe pressure sensing hole - this could cause premature launch detection and ejection.
- Do not allow direct sunlight to enter the pressure sensor's vent hole - this could cause premature launch detection and ejection.
- Do not allow the altimeter to get wet. Only operate the altimeter within the environmental limits listed in the specifications section.
- Check battery voltage(s) before each flight and replace / recharge if low.
- Do not rupture pressure sensor diaphragm with excessive pressure or sharp object.
- Always follow proper operational sequencing as listed in preflight checklist.

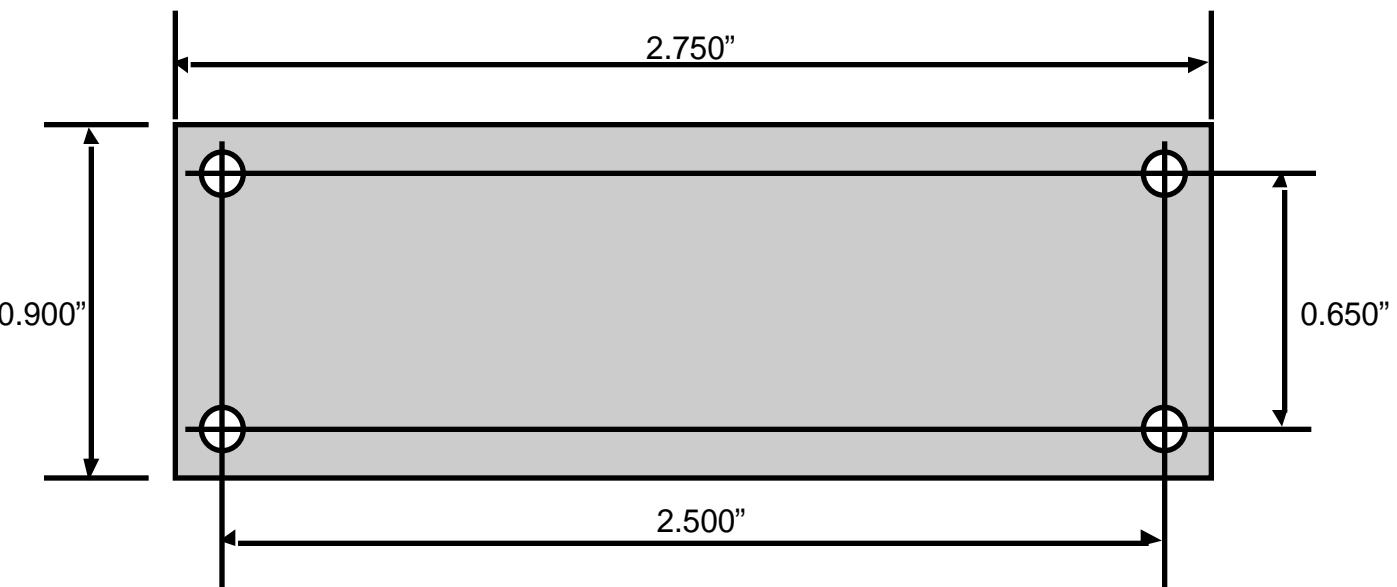


Figure 9: Mounting hole template

Mounting Notes

The supplied mounting hardware can be used to attach the altimeter to a mounting plate in your electronics bay. The pressure sensor is mounted on the bottom of the board to minimize the chance of sunlight or wind currents entering the sensing hole. Make sure that at least 1/32" clearance is provided between the mounting plate and the face of the pressure sensor to allow for the proper pressure sensor operation.

Specifications

HiAlt45K	
dimensions:	0.90"W x 2.75"L x 0.625"T
weight:	12 grams (without battery)
operating voltage:	9V nominal (6V - 16V)
operating current:	1.5 mA typical
firing current:	5 A max (supplied by battery)
continuity check current:	8.9 μ A/V
maximum altitude:	45,000 feet MSL
launch detect:	160 feet AGL
event 1 output:	apogee
event 2 output:	selectable 400-1300 feet AGL
altitude accuracy:	+ / - 0.75% typical
operating temperature:	0C to 70C

Appendix

Igniter Sources:

Daveyfire N28B *ematch*
Countdown Hobbies (dealer)
7 P.T.Barnum Sq.
Bethel, CT 06801-1838
(203)790-9010
www.countdownhobbies.com

Luna Tech Oxral *ematch*
148 Moon Drive
Owens Cross Roads, AL 35763
(256) 725-4224
www.pyropak.com

M-Tek MTek *ematch*
Performance Hobbies (dealer)
442 Jefferson Street NW
Washington, DC 20011-3126
(202) 723-8257
www.performancehobbies.com

PerfectFlite ECK6
P.O. Box 328
Mirror Lake, NH 03853
(603) 569-1344
www.perfectflite.com

Cosmos Cosmos *ematch*
QuickBurst HotShot
QuickBurst
59 Elm Court
Lake Jackson , TX 77566
(979) 480-0791
www.quickburst.net

Warranty

All *assembled* PerfectFlite products include a full three year/36 month warranty against defects in parts and workmanship. Should your PerfectFlite product fail during this period, call or email our Customer Service department for an RMA number and information about returning your product. The warranty applies to the altimeter only, and does not cover the rocket, motor, or other equipment. This warranty does not cover damage due to misuse, abuse, alteration, or operation outside of the recommended operating conditions included with your product. Broken pressure sensor diaphragms due to puncture or exposure to ejection charge pressure/hot gasses are NOT covered under this warranty.

Liability

Due care has been employed in the design and construction of this product so as to minimize the dangers inherent in its use. As the installation, setup, preparation, maintenance, and use of this equipment is beyond the control of the manufacturer, the purchaser and user accept sole responsibility for the safe and proper use of this product. The principals, employees, and vendors of the manufacturer shall not be held liable for any damage or claims resulting from any application of this product. If the purchaser and user are not confident in their ability to use the product in a safe manner it should be returned to the point of purchase immediately. Any use of this product signifies acceptance of the above terms by the purchaser and user.